Designed by JLab in The United States. Assembled in China.
1 year limited warranty with world-class customer support.
Please contact customer support with any questions or comments at:
www.jlabaudio.com/support

INSTALLATION INSTRUCTIONS

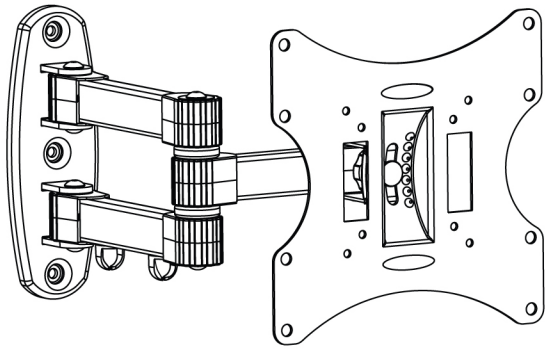

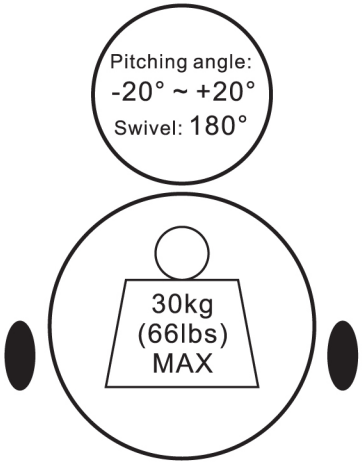

JLMS LLC suggests you contact a professional to properly install the JLab Mount. This JLab Mount must be installed using the supplied hardware with all required lag bolts screwed into the center of the wall studs. If you are mounting into concrete or mortar, all included anchors and screws must be used. By continuing with the installation, you agree that JLMS LLC and its affiliates cannot be held liable for damage to equipment, including TV's, Walls, Furniture and Fixtures. Additionally, JLMS LLC is not responsible for incorrect installation and JLMS LLC and its affiliates cannot be held liable for any injury or death due to improper installation. If you question your ability to properly install the JLab Mount, please contact a professional.

Articulating Single Arm TV Mount
Fits up to 42” TVs UPC: 812887014021

NOTE: Read entire instruction sheet before you start installation and assembly.

⚠ WARNING

- Do not begin the installation of this product before you have read and understood the instructions and warnings contained in this installation sheet. If you have any question regarding any of the instructions or warnings, Please contact your local distributor.
- Please refer to installation guide recommendation for required distance from wall to avoid risk of property damage.
- This product should only be installed by someone of good mechanical aptitude, with basic building experiences, and a full understanding of this manual.
- Make sure that the supporting surface will safely support the combined load of the electronic equipment and all attached hardware and components.
- Never exceed the maximum load capacity.
- If mounting to wood wall studs, make sure that mounting screws are anchored into the center of the studs. Use of an “edge to edge” stud finder is highly recommended.
- Always use an assistant or mechanical lifting equipment to safely lift and position equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can damage the screws, greatly reducing their holding power.
- This products intended for indoor use only. Use of this product outdoors could lead to product failure and personal injury.

Component Checklist

IMPORTANT: Ensure you have received all parts against the component checklist prior to installing. If any parts are missing or faulty, please contact your local distributor for a replacement.

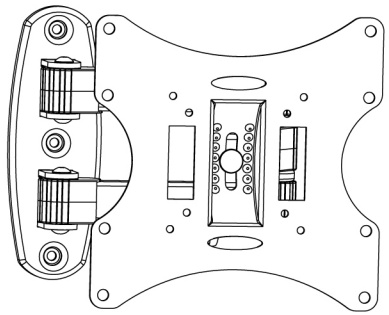

Package M

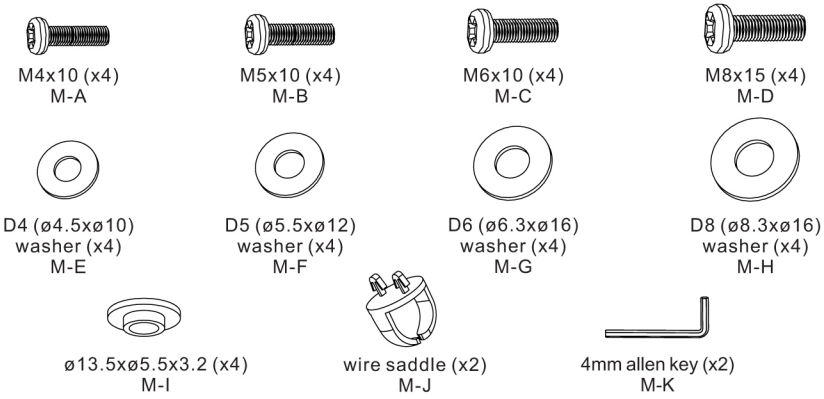

Package W

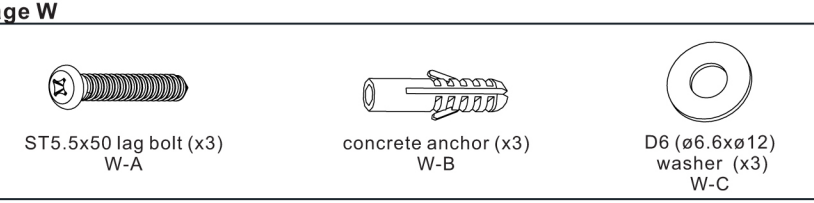

Tools required

·Phillips Head Screw driver(200mm length exclude the handle)

·Electric drill and 8mm masonry bit for concrete wall installation

·Marking Pen

·Hammer

Insert the wire saddle(M-J) to the holes first, as shown below.

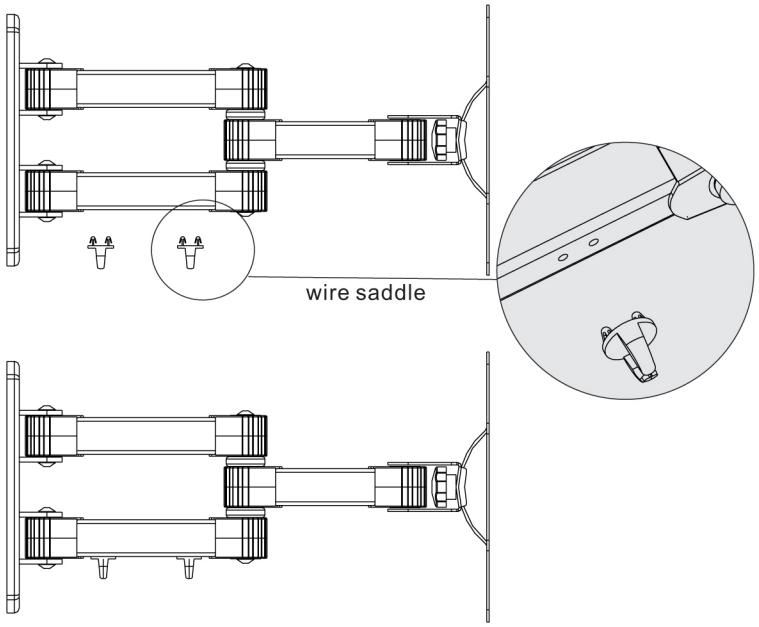

1a WOOD STUD WALL MOUNTING:

⚠ WARNING

- Make sure that the supporting surface will safely support the combined load of the electronic equipment and all attached hardware and components.
- Tighten wood screws firmly, but do not over tighten. Over tightening can damage the screws, greatly reducing their holding power.
- Make sure that mounting screws are anchored into the center of the studs. Use of an “edge to edge” stud finder is highly recommended.
- Hardware provided is for attachment of mount through standard thickness drywall or plaster into studs. Installers are responsible to provide hardware for other types of mounting situations.

- Use a stud finder to locate the edges of the studs. Use of an edge-to-edge stud finder is highly recommended. Based on their edges, draw a vertical line down each stud’s center.
- Place wall plate on wall as a template. And mark the center of the three mounting holes. Make sure that the mounting holes are on the stud centerline.
- Drill three 1/8” (3mm) dia. Holes 1.2” (30mm) deep. Make sure that the wall plate is level, secure it using three wood screws (W-A) and three washers(W-C) as shown in fig. 1.1.

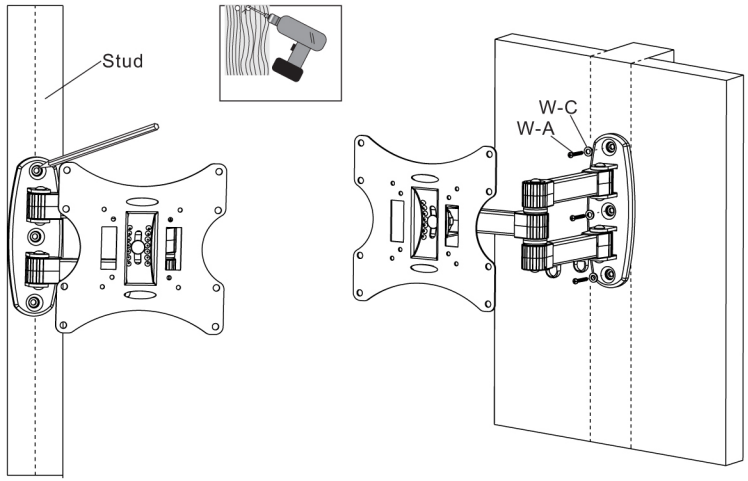

fig. 1.1

1b SOLID BRICK AND CONCRETE BLOCK MOUNTING:

⚠ WARNING

- When installing wall mounts on cinder block, verify that you have a minimum of 1-3/8” of actual concrete thickness in the hole to be used for the concrete anchors. Do not drill into mortar joints! Be sure to mount in a solid part of the block, generally 1” minimum from the side of the block. An electric drill should be used on a slow setting to drill the hole instead of a hammer drill to avoid breaking out the back of the hole when entering a void or cavity.
- Installer must verify that the supporting surface will safely support the combined load of the electronic equipment and all attached hardware and components.

- Use the Wall Plate as a template to mark 3 hole locations on the wall, as shown in fig.1.2.
- Pre-drill these holes with a 8mm masonry bit to at least 60mm in depth. Insert a Concrete Anchor (W-B) into each of these holes. Attach the Wall Plate to the wall using 3 wood screws (W-A) and 3 Washers (W-C), as in fig.1.3.

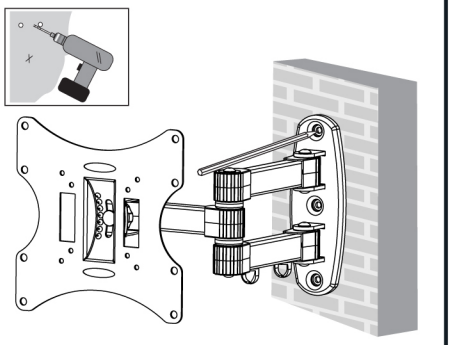

fig. 1.2

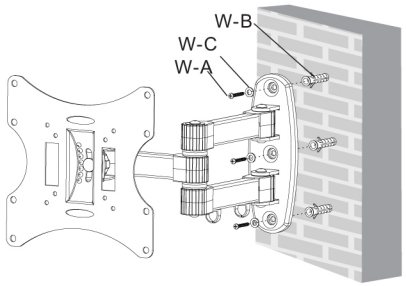

fig. 1.3

2 Installing Adapter Plate

- Find the appropriate VESA, attach the adapter plate to the back of the screen using the appropriate combination of screws, washers, as shown in fig.2.1 and fig.2.2.
- Begin with the proper screw, hand thread it through the washer and adapter plate into the screen as shown below.
- Screw must make at least three full turns into mounting hole and fit snugly into place. Do not over tighten.
- Repeat for remaining mounting holes, level plate and tighten screws.

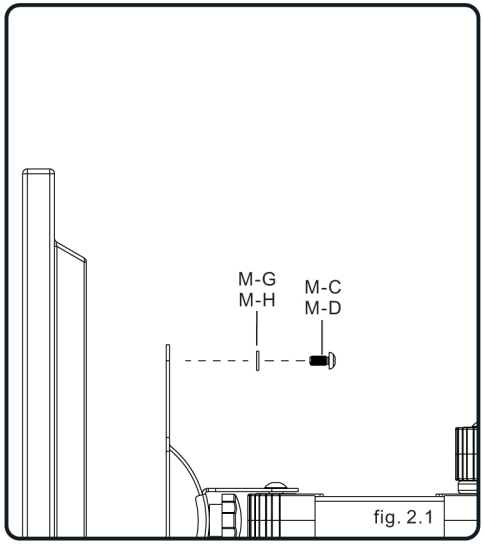

fig. 2.1

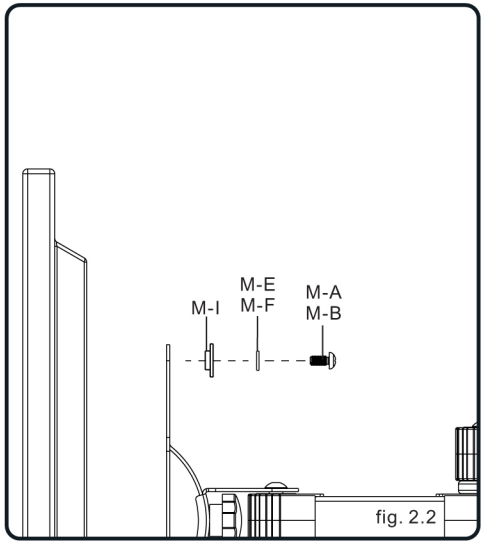

fig. 2.2

3 Pitching angle adjustment

- Use the tilt adjusting knob to adjust you TV to the desired angle, the pitching angle can be adjusted between -20°~20°, as shown fig 3.1.

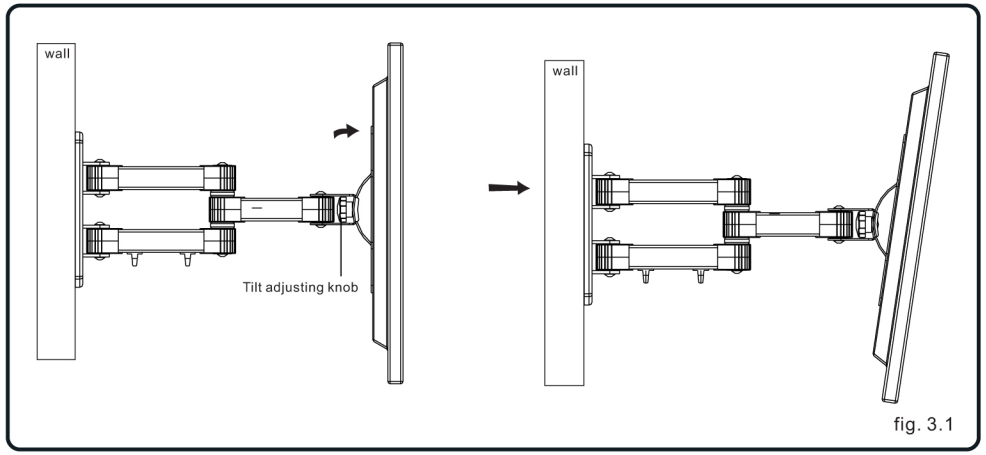

fig. 3.1

Maintenance

Once you have mounted the bracket and the flat screen, check that they are sufficiently secure and safe to use. You should check whether screws are fixed well every two months. If you have any doubts regarding the installation, please consult our retailer or service department for detail.